

Suitable Digital Camera Models. (SS-1)

| Company | Model | Note |
|-----------------|--|------|
| Agfa | 1, 100, 102, 103, 104, 105, 505x, 1338mT, 1438m, 2030m, 2338mT, DC733i, DC733s, DC830i, DC833m | |
| Aigo | F100, P1, T30, T35, T60, * T1000, T1028, T1068, T1200, T1258, T1260, T1428, T1458, V68, V80, V500, V630, V700, V720, V728, V740, V760, V780, V800, V830, V860, V866, V880, V890, V1000, V1018, V1080, W148 | |
| BenQ | C520, C530, C630, C750, C850, C1020, C1060, C1220, C1230, C1250, C1255, C1460, E510, E520, E605, E720, E800, E820, E1000, E1020, E1030, E1035, E1040, E1050, E1050t, E1220, E1230, E1240, E1250, E1260, L1020, L1050, T700, T800, T850, T1260, X600, X710, X720, X725, X835, W1220 | |
| Canon | A2200, A3000, A3000IS, A3100, A3100IS, A3200IS, A3300, IXUS30, IXUS40, IXUS50, IXUS55, IXUS60, IXUS65, IXUS70, IXUS75, IXUS80 IS, IXUS85IS, IXUS90IS, IXUS95IS, IXUS100IS, IXUS105, IXUS105IS, IXUS110IS, IXUS120IS, IXUS130, IXUS200IS, IXUS210, IXUS400, IXUS430, IXUS500, IXUS700, IXUS750, *IXUS800IS, IXUS850IS, IXUS860IS, IXUS870IS, IXUS900TI, *IXUS950IS, IXUS960IS, *IXUS970IS, IXUS980IS, IXUS990IS, IXUS i, IXUS i5, IXUS i7, IXUS iZoom, IXUS i7 Zoom, IXUS IIS, IXUS II, IXUS Wireless, IXUS V3, IXY10, IXY10S, IXY20IS, IXY25IS, IXY30, IXY30a, IXY40, IXY50, IXY55, IXY60, IXY70, IXY80, IXY90, IXY95IS, IXY110IS, IXY200F, IXY210F, IXY210IS, IXY220IS, IXY320, IXY400, IXY400F, IXY 410F, IXY450, IXY500, IXY510IS, IXY600, IXY700, IXY800IS, *IXY810IS, IXY820IS, IXY830IS, IXY900IS, IXY910IS, IXY920IS, IXY930IS, IXY1000, IXY2000IS, IXY3000IS, IXY L, IXY L2, IXY L3, IXY L4, IXY Wireless, SD10, SD20, SD30, SD40, SD100, SD110, SD200, SD300, SD400, SD430, SD450, SD500, SD550, SD600, SD630, SD700IS, SD750, SD770IS, SD780IS, SD790IS, SD800IS, *SD850IS, SD870IS, SD880IS, *SD890IS, SD900, SD940IS, SD950IS, SD960IS, SD970IS, SD980IS, SD990IS, SD1000, SD1100IS, SD1200IS, SD1300IS, SD1400IS, SD3500IS, S95, S230, S400, S410, S500 | |
| Casio | FC100, FC150, FC160S, S5, S6, S7, S8, S10, S12, S100, S500, S600, S770, S880, Z1, Z2, Z3, Z4, Z5, Z6, Z7, Z8, Z9, Z10,Z11, Z19, Z20, Z25, Z27, Z29, Z30, Z33, Z35, Z37, Z40, Z50, Z55, Z57, Z60, Z65, Z70, Z75, Z77, Z80, Z85, Z90, Z100, Z110, Z120, Z150, Z200, Z250, Z270, Z280, Z300, Z330, Z350, Z370, Z400, Z450, Z500, Z550, Z600, Z670, Z700, Z750, Z800, Z850, Z1000, Z1050, Z1080, Z1200, Z1200SR, Z3000, ZS5, ZS10 | |
| Fujifilm | A100, A150, A170, A180, A175, A220, A225, A400, A500, AV100, AV105, AV110, AV120, AV130, AV150, AV180, AV200, AV205, AV230, AV235, AV250, AV255, AV280, AV285, AX200, AX205, AX245W, AX250, AX280, AX300, AX305, AX330, AX335, AX350, AX355, AX380, AX385, F10, F11, F20, F30, F31fd, F40fd, F47fd, F50fd, F60fd, F70EXR, F80EXR, F85EXR, F75, F85, F200EXR, F455, F460, F470, F480, F100fd, F200, J10, J20, J25, J26, J27, J30, J32, J35, J37, J38, J50, J100, J120, J150W, J210, J250, JV100, JV110, JV105, JV110, JV150, JV160, JV170, JV200, JV205, JV250, JV255, JX200, JX205, JX210, JX250, JX255, JX280, JX300, JX305, JX350, JX355, JX400, JX405, JX530, JZ300, JZ305, JZ310, JZ500, JZ505, JZ510, J15fd, J110W, J150W, T200, T205, T300, T305, V10 | |
| GE | A730, A735, A830, A835, A950, A1030, A1035, A1050, A1150, A1200, A1230, A1235, A1250, A1255, A1455, A1456W, C1033, C1233, E840S, E850, E1040, E1050, E1055W, E1240, E1250W, E1250TW, E1255, E1255W, E1450W, E1480W, E1486TW, E1680W, J1050, J1250, J1455, J1470S | |
| Haier | A21, G20, G30, L90, L1080, MA5B, S40, S50, S52, S61, S66, T70, V80, V1080, V1082, V1280T, X80, X90 | |
| Hitachi | HDC-502, HDC-507, HDC-509, HDC-632, HDC-841, HDC-1231, HDC-1241 | |
| Kodak | C140, C142, C160, C180, C182, C190, C763, C913, C1013, M320, M340, M341, M380, M420, M530, M550, M575, M753, M763IS, M853, M863IS, M873, M883, M893 IS, M1033, M1063 IS, M1073IS, M1093IS, M2008, MD30, Touch, V550, V603, V1073, V1273, V530 Zoom, V550 Zoom | |
| Leica | *C-LUX 1, *C-LUX 2, *C-LUX 3 | |
| Nikon | L2, L3, L6, L10, L11, L12, L14, L15, L19, L20, L22, L23, S70, S200, S210, S220, S230, S500, S510, S520, S550, S560, S570, S600, S610, S610C, S620, S630, S640, S700, S710, S3000, S3100, S4000, S4100, S5100, S6000, S6100 | |

| | | |
|------------------|--|--|
| Olympus | FE20, FE25, FE26, FE35, FE45, FE46, FE47, FE130, FE140, FE150, FE160, FE180, FE190, FE200, FE220, FE220D, FE230, FE240, FE250, FE280, FE290, FE300, FE320, FE330, FE340, FE350, FE350 Wide, FE360, FE370, FE3000, FE3010, FE4000, FE4010, FE4020, FE4030, FE4040, FE4050, FE5000, FE5010, FE5020, FE5030, FE5050, FE5500, μ 700, μ 710, μ 740, μ 750, μ 760, μ 780, μ 810, μ 820, μ 830, μ 840, μ 1000, μ 1010, μ 1020, μ 1200, μ 1060, μ 5000, μ 5010, μ 7000, μ 7010, μ 7020, μ 7030, μ 7040, μ 7050, VG-110, VG-120, VG-130, VG-140, X600, X905, X915, X940 | |
| Panasonic | *F516, *FH1, *FH2, *FH3, *FH5, *FH-7, *FH20, *FH22, *FH25, *FH27, *FS1, *FS2, *FS3, *FS5, *FS6, *FS7, *FS10, *FS11, *FS12, *FS15, *FS18, *FS20, *FS25, *FS30, *FS33, *FS42, *FS62, *FX01, *FX2, *FX3, *FX07, *FX7, *FX8, *FX9, *FX10, *FX12, *FX30, *FX33, *FX35, *FX36, *FX37, *FX38, *FX40, *FX48, *FX68, *FX50, *FX55, *FX60, *FX65, *FX66, *FX77, *FX78, *FX100, *FX150, *FX180, *FX500, *FX520, *FX550, *FX580, *LS85, S1, S3, *ZR1, *ZR3, *ZX1, *ZX3 | |
| Pentax | 50, A10, A20, A30, A36, A40, E40, E50, E70, E85, E75, E60, E65, E70L, E90, H90, L20, L36, L50, M10, M20, M30, M40, M50, M60, M85, M90, P70, P80, RS1000, RS1500, S, S5i, S5n, S5z, S1, S4, S4i, S6, S7, S10, S12, S30, S40, S45, S50, S55, S60, T10, T20, T30, V10, V20, W60, SV, Svi, Z10 | |
| Polaroid | i737, i834, i835, i836, i1035, i1037, i1237, i1437, T830, T1455 | |
| Praktica | 5203, 6105, 6403, 6503, 7103, 7203, 7303, 8203, 8213, 8303, 8403, 8503, 4-Z50S, 14-Z5, 14-04, 12-Z5, 12-Z4, 12-XS, 12-TS, 12-23, 12-04, 12-03, 10-XS, 12-Z4TS, 10-X3, 10-TS, 10-23, 10-03, DC 60, DCZ 5.8, DCZ 6.8, DCZ 7.2, DCZ 7.3, DCZ 7.4, DCZ 8.2, DCZ 8.3, DCZ 10.3, DCZ 10.4, DCZ 12.1, DCZ 14.1, DPix 530Z, DPix 740Z, DPix 750Z, DPix 820Z, DPix 1000Z, DPix 3200, DPix 3300, DPix 5100, DPix 5200, DPix 9000 | |
| Premier | DC67, DC68, DC87, DC593, DC6360, DM6365, DC6370, DC6371, DM7362, DM7365, DS7450, DSA350, ES6, SL4, SL5, SL8, SL53, SL58, SL63, SL68, SL83, SL86, SL1000 | |
| Ricoh | R1, R1S, R1V, R2, R2s, R3, R4, R5, R6, R7, R30, R40, R50, RR730, RR750 | |
| Rollei | Compactline 52, Compactline 55, Compactine 81, Compactine90, Compactine101, Compactine 102, Compactline 103, Compactine110, Compactline 122, Compactine200, Compactine 202, Compactline 203, Compactline 230, Compactine 302, compactline 312, Compactline 320, Compactine 350, Compactline 360TS, Compactline 390SE, Compactline 412, Compactline 415, Compactline 424, Compactline 425, da8, da70, da80, da81, da100, da101, da120, da800, da1325, da6325, da7535, da8325, da8535, dr135, dr835, Flexline140, Flexline200, Powerflex 440, Powerflex 450, Powerflex 460, Powerflex 455, Powerflex 470, Sportline 50, Sportline 60, Sportline 60 le, XS10 | |
| Samsung | CL5, D75, D860, ES10, ES15, ES17, ES20, ES30, ES55, ES60, ES65, ES70, ES73, ES75, ES80, IT100, *M310, L60, L70, L77, L100, L201, L210, L301, L310W, L700, L730, L830, PL20, PL50, PL51, PL55, PL60, PL65, PL70, PL80, PL90, PL100, PL120, PL150, PL170, PL200, PL502, S760, S1070, SH100, SL50, SL102, SL202, SL600, SL620, SL720, SL820, ST30, ST45, ST50, ST60, ST65, ST70, ST80, ST90, ST95, ST500, ST550, ST700, TL205, TL210, TL220, TL225, TL320, TL350, WB100, WB1000, WB2000 | |
| Sanyo | DSC-E6, VPC-E7, VPC-E10, VPC-E60EX, VPC-E760, VPC-E870, VPC-E1000, VPC-E1075, VPC-E1090, VPC-E1290, VPC-S6, VPC-S7, VPC-S60EX, VPC-S70, VPC-S500, VPC-S600, VPC-S650, VPC-S670, VPC-S700, VPC-S750, VPC-S770, VPC-S870, VPC-S880, VPC-S1070, VPC-S1080, VPC-S1275, VPC-S1285, VPC-T700, VPC-T850, VPC-T1060, VPC-X1200, VPC-X1250, DSC-E7, DSC-S7, DSC-1200, DSC-X1250, DSC-X1260, VPC-W800 | |
| Sony | N1, N2, S650, S700, S730, S780, S930, S950, S980, S2000, S2100, WX1, WX7, WX9, WX10, W30, W35, W50, W55, W70, W80, W85, W90, W100, W110, W120, W130, W150, W170, W180, W190, W200, W210, W215, W220, W230, W270, W290, W300, W310, W320, W330, W350, W350D, W370, W380, W390, W510, W520, W530, W560, W570, W570D, WX1, WX5, WX9, WX10 | |
| Yashica | DC504, DC803, EZF10, EZF12W4XA, EZF12W4XL, EZF12W5XL, EZF524, EZF524MKII, EZF525, EZF527L, EZF531, EZF725, EZF824, EZF827, EZF924Z, EZF1027, EZF1027L, EZF1031, EZF1230, EZF1230L, EZF1231, EZF1233, EZ7032, EZ8032, EZF8035, EZF8321, EZTP-5, EZTP-9, EZTP-10, EZW-503A | |

