

Suitable Digital Camera Models. (SS-2)

Company	Model	Note
Aigo	V750, V790	
Casio	FS10, FS10S, M1, M2, M20, S1, S2, S3, S20, V7, V8	
Fujifilm	F800EXR, XP10, XP11, Z1, Z1 Zoom, Z2, Z2 Zoom, Z3, Z3 Zoom, Z5FD, Z10FD, Z20, Z20FD, Z100FD, Z30, Z31, Z33WP, Z35, Z37, Z70, Z71, Z80, Z81, Z90, Z91, Z100, Z200, Z200fd, Z250, Z250fd, Z300, Z700EXR, Z707, Z707EXR, Z800EXR, Z808EXR	
GE	G1, G2, G3WP, G5WP	
Haier	V805W	
Hitachi	HDC-W902	
Kodak	M590	
Nikon	S1, S2, S3, S5, S8, S9, S50, S50C, S51, S51C, S52, S52C, S60, S70, S80, S1000pj	
Olympus	TG310, TG610, TG-615, μ 550, μ 730, μ 790SW, μ 850, μ 850sw, μ 1030, μ 1030sw, μ 1040, μ 1050, μ 1050sw, μ 1070, μ TOUGH-3000, μ TOUGH-6000, μ TOUGH-6010, μ TOUGH-6020, μ TOUGH-8000, μ TOUGH-8010, μ 720sw, μ 725sw, μ 730sw, μ 770sw, μ 790sw, μ 795sw, μ 850SW, μ 1050SW	
Panasonic	FP1, FP2, FP3, FP8, FT1, FT2, *FT2SG-D, TS1, TS2	
Pentax	WS80	
Praktica	DMMC 4, DMMC,luxmedia 7403, DPix 5000WP	
Rollei	Sportsline 90, X8	
Samsung	AQ100, CL5, i5, i6, i8, i50, i70, i85, i100, L83T, NV3, NV9, NV33, PL10, ST10, ST100, ST1000, SC-MS20, SC-MS25, VP-MS11, WP10	
Sony	J10, T1, T2, T3, T5, T7, T9, T10, T20, T30, T33, T50, T70, T77, T90, T99, T99D, T100, T110, T200, T300, T500, T700, T900, TX1, TX5, TX7, TX9, TX10, TX100V	
Yashica	DC318, DSC T68, EZ7033, EZF537IR, *EZ NV-1, EZUW-505	