

## Suitable Digital Camera Models. (SS-2)

Company	Model	Note
<b>Aigo</b>	V750, V790	
<b>Casio</b>	FS10, FS10S, M1, M2, M20, S1, S2, S3, S20, V7, V8	
<b>Fujifilm</b>	F800EXR, XP10, XP11, Z1, Z1 Zoom, Z2, Z2 Zoom, Z3, Z3 Zoom, Z5FD, Z10FD, Z20, Z20FD, Z100FD, Z30, Z31, Z33WP, Z35, Z37, Z70, Z71, Z80, Z81, Z90, Z91, Z100, Z200, Z200fd, Z250, Z250fd, Z300, Z700EXR, Z707, Z707EXR, Z800EXR, Z808EXR	
<b>GE</b>	G1, G2, G3WP, G5WP	
<b>Haier</b>	V805W	
<b>Hitachi</b>	HDC-W902	
<b>Kodak</b>	M590	
<b>Nikon</b>	S1, S2, S3, S5, S8, S9, S50, S50C, S51, S51C, S52, S52C, S60, S70, S80, S1000pj	
<b>Olympus</b>	TG310, TG610, TG-615, $\mu$ 550, $\mu$ 730, $\mu$ 790SW, $\mu$ 850, $\mu$ 850sw, $\mu$ 1030, $\mu$ 1030sw, $\mu$ 1040, $\mu$ 1050, $\mu$ 1050sw, $\mu$ 1070, $\mu$ TOUGH-3000, $\mu$ TOUGH-6000, $\mu$ TOUGH-6010, $\mu$ TOUGH-6020, $\mu$ TOUGH-8000, $\mu$ TOUGH-8010, $\mu$ 720sw, $\mu$ 725sw, $\mu$ 730sw, $\mu$ 770sw, $\mu$ 790sw, $\mu$ 795sw, $\mu$ 850SW, $\mu$ 1050SW	
<b>Panasonic</b>	FP1, FP2, FP3, FP8, FT1, FT2, *FT2SG-D, TS1, TS2	
<b>Pentax</b>	WS80	
<b>Praktica</b>	DMMC 4, DMMC,luxmedia 7403, DPix 5000WP	
<b>Rollei</b>	Sportsline 90, X8	
<b>Samsung</b>	AQ100, CL5, i5, i6, i8, i50, i70, i85, i100, L83T, NV3, NV9, NV33, PL10, ST10, ST100, ST1000, SC-MS20, SC-MS25, VP-MS11, WP10	
<b>Sony</b>	J10, T1, T2, T3, T5, T7, T9, T10, T20, T30, T33, T50, T70, T77, T90, T99, T99D, T100, T110, T200, T300, T500, T700, T900, TX1, TX5, TX7, TX9, TX10, TX100V	
<b>Yashica</b>	DC318, DSC T68, EZ7033, EZF537IR, *EZ NV-1, EZUW-505	